
Saratoga 01-330



Epson Brightlink



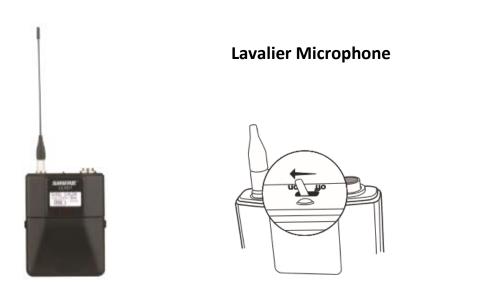

Use the switch to power the microphone on or off Clip the microphone to your shirt, tie, or jacket about 6-8 inches below your chin