

## S103 Microphones



### Podium Microphone

The podium gooseneck microphone is always active and does not have to be turned on and off.  
The neck can be adjusted to suit the height of the speaker



### Wireless Microphones



These Revolabs microphones can be clipped onto your shirt or set on the table in front of you.

Hold down the button for a few seconds to turn on the mic. When the light is on, press the button once to activate the mic (the light will turn green). Press the button again to deactivate the mic (the light will turn red when deactivated). Hold the button for a few seconds to power the mic off.